

GERANICA

24CM DIGITAL AIR CIRCULATOR

GF20ACB



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

| | |
|------------------------|----|
| General Safety | 4 |
| Before first use | 6 |
| Product Overview | |
| Fan | 7 |
| Remote Control | 8 |
| Operation Instructions | 10 |
| Specifcations | 12 |
| Customer Support | 12 |

GENERAL SAFETY

Read this manual thoroughly before you start using the Fan.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Do not expose this product to rain or moisture as it may result in fire.
 - Do not temper or change or modify the product in any way.
 - Only use Accessories outlined and recommended by the manufacturer.
 - Please do not expose the product to splashing or water contact
-
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
 - No naked flame source, such as candles, should be placed on the product.
 - Do not operate the fan while power cord is coiled up, please completely unwind the power cord before using.
 - Do not allow power cord to hang over edge of table or bench.
 - Never move the fan by the power cord.
 - Move the power cord away from pathways of persons so they do not trip.
 - Do not run power cord under carpeting or cover it with rugs. Must have quick access to unplug the fan.
 - Do not use this fan with an extension cord, power adaptors or external timers.
 - This product is not designed for commercial, industrial or outdoor use.
 - Do not leave the fan unattended during use. Always switch off and unplug when not in use for a long time.
 - Children must be supervised at all times while in use. This fan is not a toy. Make sure children do not go near or attempt to play with this fan.
 - **AIRFLOW** - Make sure nothing is obstructing or blocking the airflow outlet at the front of the fan, and the airflow intake which is the back of the fan.
 - Do not insert any foreign objects into the fan grill opening as this may cause damage to the appliance and lead to electric shock and/or a fire hazard.

GENERAL SAFETY (CONT.)

- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit. Please disconnect the product from main power.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

Please make sure upon positioning this product, the place is:


- Not wet or damp and Well ventilated.
- Placed on a stable surface to avoid product from tipping over.
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 20cm above and 5cm spacing on both sides for proper ventilation.
- Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place small metallic objects near the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

GENERAL SAFETY (CONT.)

Before first use


- Unpack the fan and accessories and ensure all parts of the product are undamaged and in good working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the power cord to its full length and inspect it for damage before each use. Do not use the product if it or its cord has been damaged or is not working properly. In case of damage, contact our after sales support line for advice on examination, repair or return of the damaged product.
- Ensure the fan is not exposed to direct sunlight or placed near a heater or other heat source.
- Placed on a flat and dry surface.
- Do not place in areas of high humidity such as bathrooms, laundry area, near a sink, washer or pool (any source of water).

PRODUCT OVERVIEW

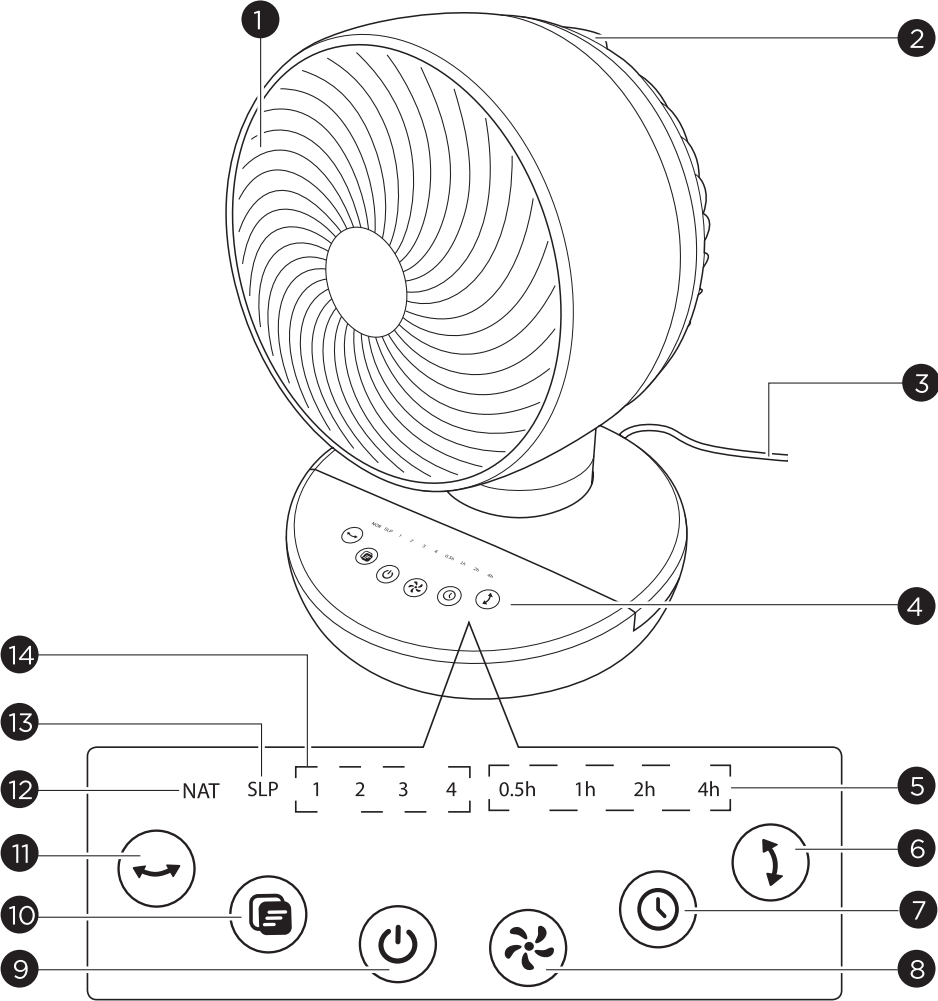

- | | | | |
|---|-------------------------------------|----|------------------------------------|
| 1 | Protective grill | 8 | Speed button (⚙️/⚙️) |
| 2 | Handle | 9 | On/off button (⏻) |
| 3 | Mains cord | 10 | Mode button (📄) |
| 4 | Control panel (touch-sensitive) | 11 | Horizontal oscillation button (↔️) |
| 5 | Timer display | 12 | Natural breeze display |
| 6 | Vertical oscillation button (⬆️/⬆️) | 13 | Sleep breeze display |
| 7 | Timer button (⌚) | 14 | Speed setting display |

PRODUCT OVERVIEW (Cont.)

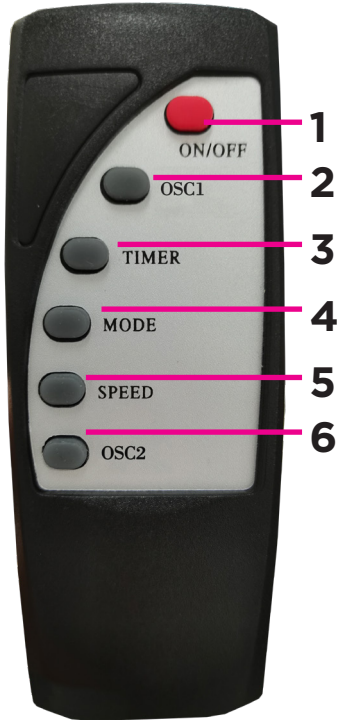

1. Off button
2. OSC1 - Oscillation (left/right)
3. Timer button
4. Mode Button
5. Speed setting
6. OSC2 - Tilt Front/back

Getting Started

Remote Control

- The fan comes with a remote control, which is powered by two AAA batteries (not supplied). Removing battery cover by sliding the cover outwards with your thumb. Insert new AAA batteries into the compartment and make sure they are placed correctly following the polarity symbols (+ / -) and place battery cover back on.
- Do not mix new batteries with old while first setting up remote control or replacing batteries.
- If you are not using fan or remote control for long period of time, remove the batteries from the battery compartment to avoid leakage.

WARNING - ELECTRIC SHOCK HAZARD.

Do not plug in the power supply into electrical outlet and turn on the power until the fan is completely 100% assembled. Please follow the instructions on the pages following.



WARNING! DANGER if swallowed

The product contains batteries inside. Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.

If swallowed, immediately call the 24-hour Poisons Information Centre on 13 11 26 for fast expert advice. Dispose of used batteries immediately.

Always keep an eye on children and ensure they do not gain access of the remote control and open the battery compartment.

| | | |
|--|--|--|
| | <p>WARNING!</p> <p>KEEP OUT OF REACH OF CHILDREN</p> <p>Swallowing batteries can lead to chemical burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.</p> | |
|--|--|--|

OPERATING INSTRUCTIONS

SPEED SETTINGS





Press the mode button on remote control to change the fan breeze
The SPEED is adjusted by pressing  button for your desired level of cooling comfort:

- 1- Breeze speed
- 2- Low speed
- 3- Middle speed
- 4- High speed


The appropriate LED light will illuminate.

Oscillating setting

To start and stop oscillation of the fan head:

1. Push the “  ” button once , To start horizontal swing,
push the “  ” button again,to stop horizontal swing.
2. Push the “  ” button once, To start vertical swing,
push the “  ” button again, to stop vertical swing.

Timer setting

To start and stop the timer, press the “  ” button to cycle through the timer settings:


0.5h ,1h, 2h, 4h up to 7.5h

The appropriate LED light will illuminate.


OPERATING INSTRUCTIONS (Cont.)

NATURAL BREEZE AND SLEEP BREEZE SETTING

Setting 1:

Press the “” button once on unit or MODE on the remote control. The fan speed will automatically varies from faster and slower, The appropriate LED light (Natural Breeze) will illuminate.

Setting 2:

Press the “” button on unit or MODE on remote control again to activate this setting. This function varies the fan speed from fast to slow. The appropriate LED light (Sleep Breeze) will light up when the function is activated.

- In this mode, the product will operate in the same way as the natural breeze mode and additionally, will gradually decrease the maximum operation speed every 30 minutes until the lowest speed is reached.

Setting 3:

Natural breeze and sleep breeze off

SPECIFICATIONS

| | |
|-----------------------|----------------------------------|
| Power | 220-240V ~ 50-60Hz 70W |
| Remote control | 2 x AAA batteries (not included) |
| Motor | Full Copper Motor |
| Maximum Fan Flow Rate | 26.98m ³ /min |
| Maximum Air Velocity | 4.59 m/s |
| Weight | Net: 3 / Gross: 3.6 kg |
| Dimensions | 282 (w) x 282 (d) x 365 (h) mm |



CUSTOMER HELPLINE:
info@ayonz.com

DISTRIBUTED BY:
Ayonz Pty Ltd